

DENON®

AVR-X3100W

INTEGRATED NETWORK AV RECEIVER

ENGLISH

FRANÇAIS

ESPAÑOL

Quick Start Guide

Guide de configuration rapide / Guía de configuración rápida

Read Me First....

Lisez-moi en premier.... / Lea esto primero....

Please do not return this unit to the store – call for assistance.

If you need help... :

If you need additional help in solving problems, contact Denon customer service in your area.

1-855-MY.Denon

1-855-693-3666

Call for Assistance: Monday – Friday 10:00AM to 10:00PM E.S.T, Saturday 12:00PM to 8:00PM E.S.T

For frequently asked questions please visit www.usa.denon.com/FAQ



 
 
For US and Canada only

Welcome



Thank you for choosing a Denon AV receiver. This guide provides step-by-step instructions for setting up your AV receiver.

Before You Begin

Required for Setup

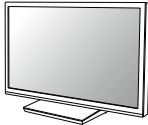 <p>TV</p>	 <p>HDMI cable</p>
 <p>Speaker systems</p>	 <p>Speaker cables</p>



  











Optional

 <p>LAN cable</p>	or  <p>Wi-Fi router</p>
---	---



- When connecting this unit to a device that is compatible with the Deep Color, 4K and ARC functions, use an “High Speed HDMI cable with Ethernet” that comes with the HDMI logo.
- These drawings are for illustrative purposes only and may not represent the actual product(s).

What’s In the Box

Quick Start Guide		Power cord	
Owner’s Manual		FM indoor antenna	
Safety Instructions		AM loop antenna	
Notes on radio		Sound calibration microphone	
Warranty (for North America model only)		Sound calibration microphone stand	
Cable labels		Remote control unit	
Receiver		R03/AAA batteries	



The supplied Sound calibration microphone stand is convenient for use when performing Speaker Calibration. Using your own tripod or the supplied Sound calibration microphone stand enables settings to be automatically configured to the optimum listening environment, providing exceptionally high performance.

Setup

There are three steps to the setup process.



1 Install batteries in the remote control unit

2 Connecting the receiver

3 Follow the On-Screen Setup Assistant


1

Installing batteries in the remote control unit

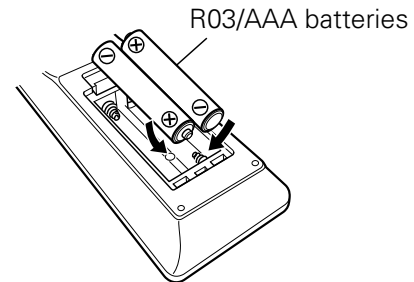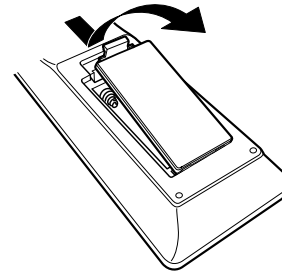

2 Connecting the receiver


- Place the receiver near your TV and connect the power cable.

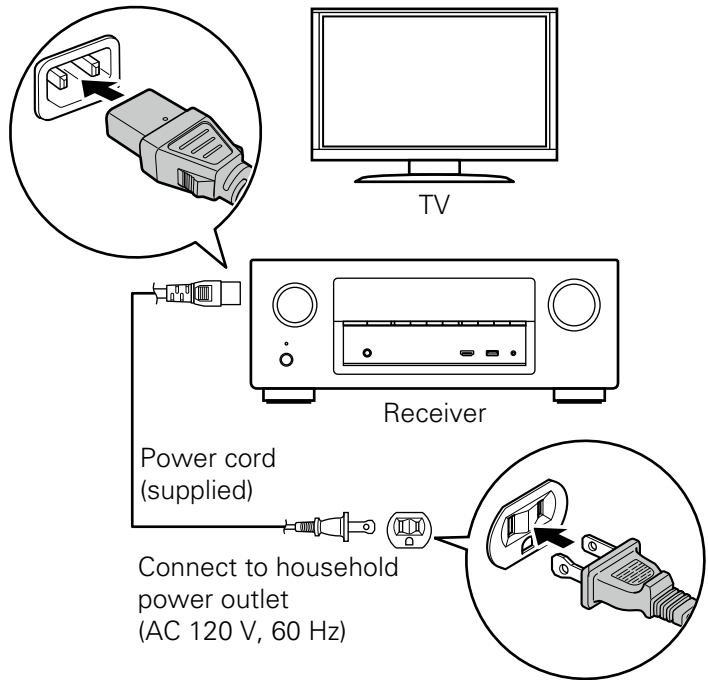

❑ Connect to the network.


Wired LAN

When connecting cables (wired connection), connect a LAN cable between your receiver and your network router.

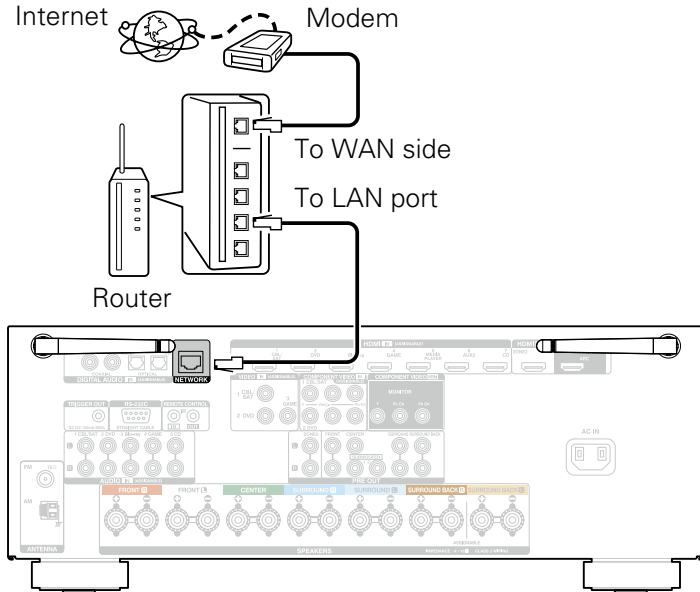


Wireless LAN



When using a wireless connection (Wi-Fi), rotate the antennas upword.

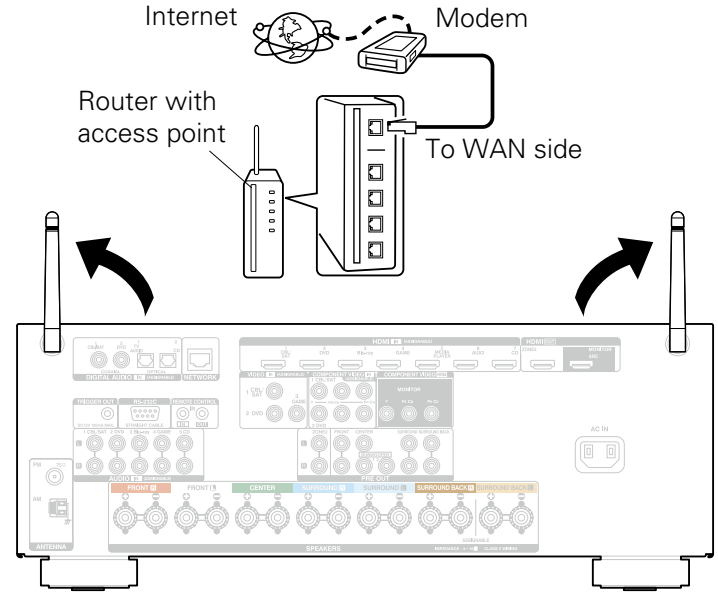

- ❑ **Connect the receiver to your TV with an HDMI cable.**

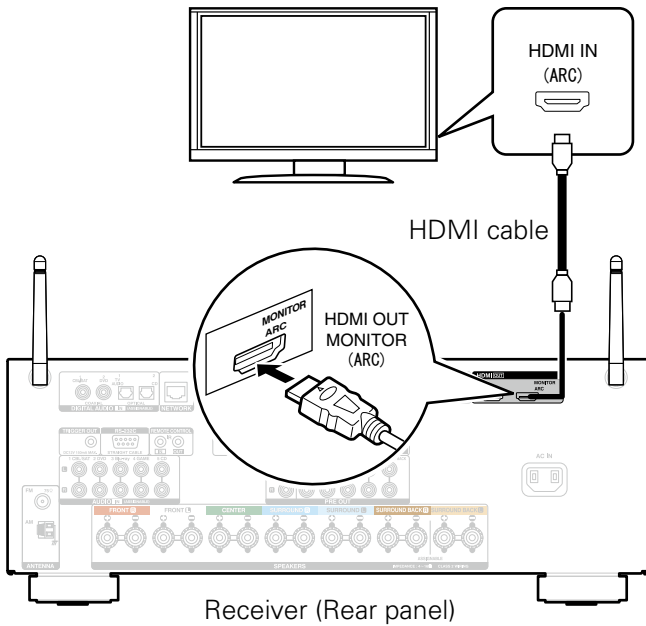


- ❑ **Turn on the TV.**

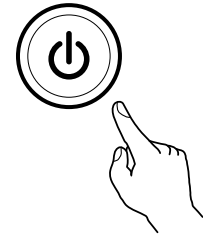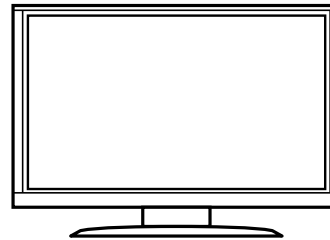

TV remote control unit


- ❑ **Select the appropriate HDMI input on your TV.**

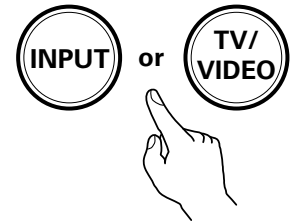

TV remote control unit


❑ Turn on the receiver.

- Press  to turn on the receiver.

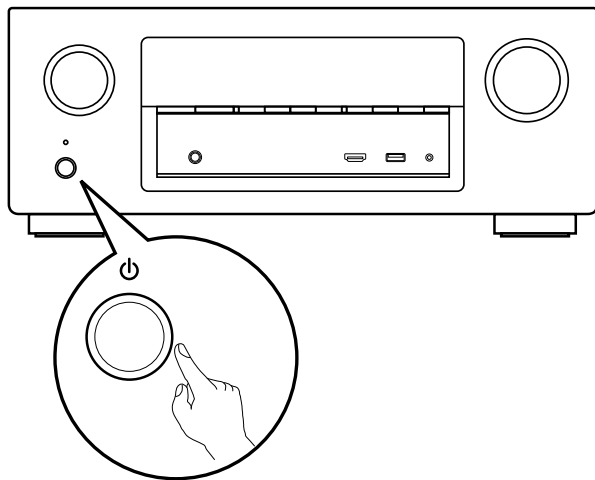

❑ Verify the connection.


- Verify that you can see this screen on your TV.

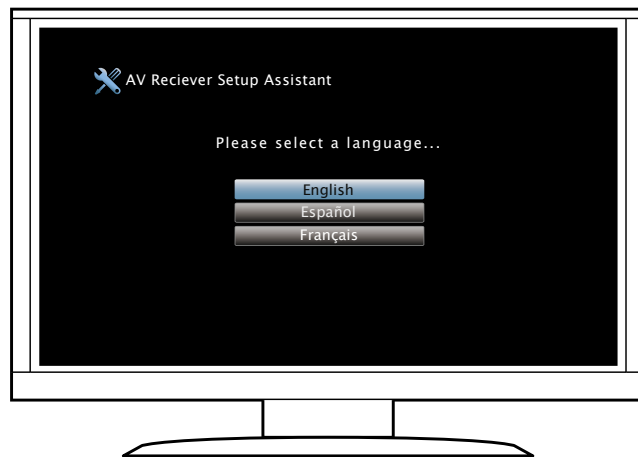

When this screen is not displayed, please read operation from the beginning.

3 Follow the On-Screen Setup Assistant

The Setup Assistant will walk you through connecting and configuring your speakers and components to your Denon receiver. Please use the remote control and follow the on-screen instructions.

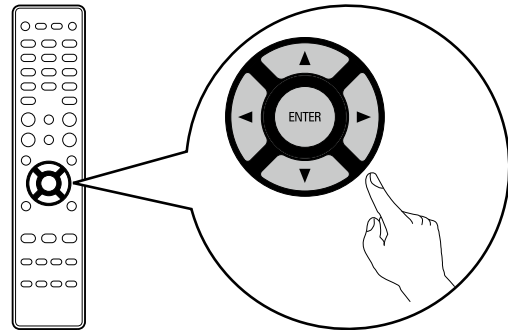

Owner's Manual

Please reference these manuals for more details about the setup and operation of the receiver and its features.

❑ Web Manual

To read it on your tablet or PC, please access to Web Manual site.

manuals.denon.com/AVRX3100W/NA/EN/



This Web Manual is optimized for tablets and mobile devices.

Web Manual




❑ PDF Manual

To read the owner's manual on your computer or to print it out, please open the included CD-ROM or select the "PDF Download" link from the Web Manual.

1

Insert the disc into your PC.

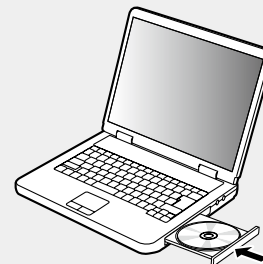

2

Follow the screen or double click on the PDF file.

DENON®

www.denon.com

D&M Holdings Inc.
Printed in China 5411 11192 00AD